

# Combi-Cam E

- cabinets
- lockers
- and more!

## OPERATING MANUAL



Division of



Security  
Products

 Please read this  
manual before using  
the Combi-Cam E




eco-friendly  
electronic lock

## INDEX

Introduction	3
Initial Setup	4
Assign Master Card	4
Selecting Operation Option Of The mini K10p	4
Assign or Delete Service Cards	5
Assign User Card / Cards	5
Deleting User Card	5
Operating Instructions	6
Individual Operation With Card To Lock / Unlock	6
One Time Use Operation With Card To Lock / Unlock	6-7
Cardless Individual Operation	7
- Change Password	7
- Unlock With Password	7
- Unlock With Cards	7
- Lock With Password	8
- Lock With Cards	8
Cardless One Time Use Operation	8
- Lock With Password	8
- Lock With Card	8
- Unlock With Password	9
- Unlock With Cards	9
Programming Instructions	10-11
Light And Audio Warnings	11
Program Table	12
Maintenance	13
General Warnings	13
Limited Warranty	14
Liability Limits	14
Technical Specifications	14
Thank You	14
Quick Info	15

## INTRODUCTION

1. Red LED
2. Green LED
3. Keypad
4. Lock Body
5. Closing Position
6. Handle Indicator
7. Opening Position
8. Handle
9. Mounting Nut
10. Lock Body
11. Battery Cover
12. Battery Cover Screw
13. ID Label
14. Hand Knob Frame
15. Cam
16. Cam Screw
17. Cylinder Nut

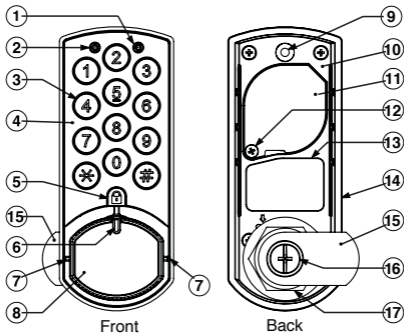

### DESCRIPTION:

Besides the stylish and enriching design of the lock, there are various features that make the lock different from others, such as allowing to use with wet hands, easy and quick installation at wood and steel cabinets, easy application at existing cabinets, easy application at right/left cabinet doors, higher battery life with very low energy consumption, high reliability and operating with a contactless card.

## USAGE:

Contactless card lock can be used with three types of cards: "User Card, Service Card and Master Card". Also, the lock can be used with a password by selecting the user card free operation. Service card is passive by default. You should center the card when holding over the handle to enable accurate reading. Since the device enters the sleep mode to offer low energy consumption, you need to wake the lock up by pressing any button before each operation.

## INITIAL SETUP:

### • Assign Master card:

- 1- Press **# #**, two tone beep is heard.
- 2- And then present the master card to the handle until one tone beep is heard and green led blinks.



**This step is valid if there is no assigned Master Card before.**

### • Selecting Operation option of the mini K10p:

- 1- Press **# #**, present the master card to the handle and press **\***, green and red leds blink.

- 2- Press 1 for selecting operation options. And then  
Press 0 for Individual operation with card.  
Press 1 for One time use operation with card.  
Press 2 for cardless Individual operation.  
Press 3 for cardless One time use operation.



• **Assign/Delete Service card / cards:** (If you don't need to use any service card, skip this step)

 
1- Press **# #**, present the master card to the handle and press **\***, green and red leds blink.

2- Press 5 for selecting service card assign / delete option. And then  
Press 0 for All service cards are deleted.  
Press 1 for Assignment of 1. service card.  
Press 2 for Assignment of 2. service card.  
Press 3 for Assignment of 3. service card.



• **Assign User card / cards :** (If you don't need to use any user card, skip this step, when individual operation with card option is selected)

1- Press **\*** and then present master card to the handle, press **\*** again.  
2- Then enter the sequence number of user card  
3- Present that card to lock.



• **Deleting User card:** (If you don't need to use any user card, skip this step, when individual operation with card option is selected)

1- Press **\*** and then present master card to the handle, press **#**.  
2- Then enter the sequence number of user card.



## OPERATING INSTRUCTIONS

### Individual operation with card (if selected)

#### ▪ To Unlock:

- 1- Press any number button for wake the lock up.
- 2- Present **any assigned user card / master card / service card** to the handle in 3 seconds
- 3- turn the handle to the unlocked position.



#### ▪ To Lock:

- 1- Press any number button for wake the lock up.
- 2- Present **any assigned user card / master card** to the handle in 3 seconds
- 3- Turn the handle to the locked position.



### One time use operation with card (if selected)

#### ▪ To Lock:

- 1- Press any number button for wake the lock up.
- 2- Present **any card / master card** to the handle in 3 seconds
- 3- Turn the handle to the locked position.



▪ **To Unlock:**

- 1- Press any number button for wake the lock up.
- 2- Present **any card / master card / service card** to the handle in 3seconds
- 3- Turn the handle to the unlocked position.



**Cardless individual operation (if selected)**

▪ **Change Password:** (default "1010")

- 1- Press \* and then enter the old password by pressing number buttons, press \* again.
- 2- And then enter the new password by pressing number button, press \*



▪ **To Unlock with Password:** (default "1010").

- 1- Enter the user password. 2- Turn the handle to the unlocked position.



▪ **To Unlock with Cards:**

- 1- Press # button for wake the lock up.
- 2- Present **master card / service card** to the handle in 3 seconds
- 3- Turn the handle to the unlocked position.



▪ **To Lock with Password:** (default “1010”).

1- Enter the user password. 2- Turn the handle to the locked position.

1



2



▪ **To Lock with Card:**

1- Press **#** button for wake the lock up.  
2- Present **master card** to the handle in 3 seconds  
3- Turn the handle to the locked position.

1



2



3



**Cardless one time use operation (if selected)**

▪ **To Lock with Password:** (default “1010”).

1- Enter the new password. 2- Turn the handle to the locked position.

1



2



▪ **To Lock with Card:**

1- Press **#** button for wake the lock up.  
2- Present **master card** to the handle in 3 seconds  
3- Turn the handle to the locked position.

1



2



3






▪ **To Unlock with Password:**

- 1- Enter the same password with locking operation.
- 2- Turn the handle to the unlocked position.



▪ **To Unlock with Cards:**

- 1- Press  button for wake the lock up.
- 2- Present **master card / service card** to the handle in 3 seconds
- 3- Turn the handle to the unlocked position.



The unlocking direction depends on type of door where 4` ^ SZ4 R^ 6 is used. All locking and unlocking illustrations depict right handed door installation.

## PROGRAMMING INSTRUCTIONS

1- Press **# #**, present the master card and then press **\***, green and red leds blink.

2- Enter the program number to be customized and then enter the selected settings number. (Press Program Number and then Selection Number)



### Restore Default Settings: Press 0 - 1

Default Settings are :

One time use operation with card, audible operation, penalty operation is not active, service card is not active, locking with password, door open warning is not active, resetting user password with service card usage is not active, blocking the lock is not active.

### Mute Operation: Press 2 - 0

All audio warnings can be turned off if mute operation is selected (except warning beeps).

### Audible Operation: Press 2 - 1

Button feedback, warnings and confirmation are audible.

### Penalty Operation: Press 3 - 1

Prevents tampering of lock by unauthorized people. Lock is blocked for 5 minutes if wrong password / card is entered three times consecutively.

Factory default is that this feature is not active. **Press 3 - 0**

### Delete All User Cards: Press 4 - 0

It deletes all user cards assigned in the **Individual operation with card** option.

### Reset User Password: Press 4 - 1

User password is restored to default "1010" in the **Cardless individual operation** option.

**Locking with password / card: <sup>(1)</sup> Press 6 - 0**

Locking operation require a password / card to lock.

**Automatic Locking (without password/card): <sup>(1)</sup> Press 6 - 1**

Locking operation does not require a password / card to lock.

**Warning of open door : <sup>(1)</sup> Press 7 - 1**

After door is open for one minute, lock gives an audible warning to user with 8 beeps every 5 seconds to notify user that the door has been left open.

Factory default is that this feature is not active. **Press 7 - 0**

**Resetting User Password with Service card usage: <sup>(1)</sup>, <sup>(2)</sup> Press 8 - 1**

When the lock is unlocked with the service card, the user password is reset. The user password is restored to default, which is "1010".

Factory default is that this feature is not active. **Press 8 - 0**

**Blocking the lock : <sup>(2)</sup> Press 9 - 1**

If lock opened with service card, it can be blocked from further user card access. This would insure service card is only used to access locks for emergency lockouts. Master card access would then be required to set up user card again.

Factory default is that this feature is not active. **Press 9 - 0**

<sup>(1)</sup>: valid for individual operation with card or cardless individual operation options.

<sup>(2)</sup>: valid if any service card is active.

**LIGHT AND AUDIO WARNINGS:**

**Password/card is accepted** : Green LED blinks with 2 repeated audio warnings.

**Wrong password / card** : Red LED blinks with 4 repeated audio warnings.

**Low battery** : Red LED blinks 5 times after each operation.

**Lock is open** : 8 audio warnings every 5 seconds after one minute of opening the lock.

Program No	Option	Factory Settings
0	1	<b>Prg No 1-1:</b> One time use operation with card
		<b>Prg No 2-1:</b> Audible beeps and confirmations
		<b>Prg No 3-0:</b> Penalty operation PASSIVE
		<b>Prg No 4-0:</b> Delete all user card
		<b>Prg No 5-0:</b> Service card PASSIVE
		<b>Prg No 6-0:</b> Locking with password
		<b>Prg No 7-0:</b> Warning of open door PASSIVE
		<b>Prg No 8-0:</b> Resetting User Password with Service card usage PASSIVE
		<b>Prg No 9-0:</b> Lock block PASSIVE (if service card is active)
1	0	Individual Operation with card
	1	One time Use Operation with card (locker mode for multiple user)
	2	Cardless Individual Operation
	3	Cardless One time use Operation (locker mode for multiple user)
2	0	Mute Operation
	1	Audible Operation
3	0	Penalty PASSIVE
	1	Penalty ACTIVE
4	0	Delete all user cards.
	1	User password is restored to default, which is "1010".
5	0	Service Card PASSIVE / DELETE
	1	Assignment of 1.Service Card
	2	Assignment of 2.Service Card
	3	Assignment of 3.Service Card
6	0	Locking with Password
	1	Automatic Locking
7	0	Warning of door open PASSIVE
	1	Warning of door open ACTIVE
8	0	Resetting User Password with Service card usage PASSIVE
	1	Resetting User Password with Service card usage ACTIVE
9	0	Block the Lock PASSIVE (if service card is active)
	1	Block the Lock ACTIVE (if service card is active)

## MAINTENANCE:

- ⚠ - Clean front of lock with a mild damp cloth with detergent if needed.
- Do not use any hard or scratching cleanser.
- Do not clean with chemical materials that melt plastic (thinner, acetone, etc.)
- Be careful not to spill water on lock.

## GENERAL WARNINGS:

- ⚠ - Read manual before using lock.
- Periodically check nuts and screws to be tightened.
- Do not over-tighten nuts or screws. Do not use an electric screw gun during installation unless equipped with a torque adjuster. The maximum torque on the cylinder screw is 25Nm.
- Set and test user and master password prior to installing the lock
- Change all default passwords with your own passwords.
- Common sense, but we must say it... Do not keep the passwords in the cabinet where the lock is being installed!
- It is not possible to open lock if installed and you forget the user and master password.
- Lock gives a warning beep when incorrect passwords have been entered in repeatedly.
- Not possible for front side of lock to be opened by breaking or trying to force open lock.
- Use CR2450 3.0V Lithium batteries.
- Remember that battery consumption is high when programs 2, 3, and 7 are active.

## CAMS:

- Two cams are included-
- Cams can be placed at increments of 90 degrees
- The Stop Cam (#4) in installation instructions can be positioned for turning the cam clockwise or counter-clockwise



## OTHER:

Battery failure override- The miniK 10 has 2 external nodes surrounding the red and green indicator lights where an external battery can be connected long enough to enter in the correct code to open the lock allowing new batteries to be installed.

## ⚠ ATTENTION!


In case of any failure, inform the vendor in writing of the detailed description of the failure. In case of any intervention in the device, such as attempting to repair the device, the device gets **OUT OF WARRANTY**.

▪ **To Unlock with Password:**

- 1- Enter the same password with locking operation.
- 2- Turn the handle to the unlocked position.



▪ **To Unlock with Cards:**

- 1- Press  button for wake the lock up.
- 2- Present **master card / service card** to the handle in 3 seconds
- 3- Turn the handle to the unlocked position.



The unlocking direction depends on type of door where 4` ^ SZ is used. All locking and unlocking illustrations depict right handed door installation.


## QUICK INFO

## LOCKING / UNLOCKING WITH USER CARD



## LOCKING / UNLOCKING WITH MASTER CARD



If cardless individual operation option or cardless one time use operation option is selected, you should press  button at first to lock and unlock by using the master card.

# Combi-Cam $\epsilon$

Schools



Hospitals



Spa and Baths



In Mailboxes



eco-friendly

Sports Halls



Staff Lockers

Division of



**Security  
Products**

[www.fjmsecurity.com](http://www.fjmsecurity.com)

[www.combi-cam.com](http://www.combi-cam.com)

18424 HWY 99 - Lynnwood WA 98037

